

MEDION®

4" Smartphone

MEDION® E4002 (MD 98388)



Instruction Manual

Content

1.	About these Instructions.....	6
1.1.	Symbols and Keywords used in these Instructions.....	7
1.2.	Proper use	8
1.3.	Declaration about Conformity	9
1.4.	Usage Limitations.....	10
1.5.	Making Calls while Driving	11
1.6.	Additional Costs for Internet and Roaming Usage.....	14
2.	Safety instructions.....	16
2.1.	Disclaimer – Children and Persons with Reduced Abilities.....	16
2.2.	Operational Safety	17
2.3.	Cleaning and Care.....	20
2.4.	Data Backup	21
2.5.	Information about the Display	22
2.6.	Notes on Lithium-Ion Batteries	23
2.7.	Environmental Requirements.....	26
2.8.	Emergency Calls.....	29
2.9.	Saving a Number for use in Emergencies.....	30
3.	Package Contents	31
3.1.	Overview of the Device	32
4.	Preparations for using the Smartphone	37
5.	Operation	42

5.1.	Waking up from Standby Mode...	47
5.2.	Main Screen.....	48
5.3.	Managing Notifications.....	50
5.4.	Making/Checking Settings	54
5.5.	Making the First Call.....	62
5.6.	Connecting to the Internet.....	67
6.	Recycling and disposal	76
7.	Technical data	77



MEDION

4" Smartphone

E4002 (MD 98388)

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur under normal use and care within this warranty period, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods are not of an acceptable quality and the failure does not amount to a major failure.

After Sales Support

Phone: 1300 884 987
Internet: www.medion.com.au

3 of 80

Personal Information

Please append the following to your proof of ownership:

Serial number

Date of purchase

Place of purchase.....

Where applicable, also copy the number on your warranty documents.

Our Target Group

This operating manual is intended to be read by both first-time and experienced users. Regardless of any possible professional use, this smartphone is designed for use in a private household. The entire family will be able to enjoy the wide variety of applications it offers.

The Quality

We select our components with a close eye on functionality, ease of use, safety and reliability. Thanks to our optimally balanced hardware/software concept, we are able to offer you a state-of-the-art smartphone that you will enjoy whether you are working or at play. Thank you for purchasing our products. We are delighted to welcome you as a new customer.

Copying this Manual

This document contains legally protected information. All rights reserved. Mechanical, electronic and any other form of reproduction is prohibited without the written permission of the manufacturer.

Copyright © 2013

All rights reserved. This manual is protected by copyright. MEDION® is the owner of the copyright.

Other trademarks are the property of their respective owners.

D - MEDION AG, Am Zehnthof 77,
45307 Essen

Subject to technical and optical changes as well as printing errors.

After Sales Support

Phone: 1300 884 987
Internet: www.medion.com.au

5 of 80

1. About these Instructions



Read these operating instructions carefully before using the device for the first time. Note the warnings on the device and in the operating instructions.

Always keep the operating instructions close to hand. If you sell the equipment or give it away, make sure you also hand over these instructions and the warranty card.

1.1. Symbols and Keywords used in these Instructions



DANGER!

Warning of immediate risk of fatal injury!

WARNING!

Warning: possible mortal danger and/or serious irreversible injuries!

CAUTION!

Warning: possible light or moderate injuries!



CAUTION!

Please follow the guidelines to avoid property damage!



PLEASE NOTE!

Additional information on using the device



PLEASE NOTE!

Please follow the guidelines in the operating instructions



WARNING!

Warning: danger of electric shock!



WARNING!

Warning: danger due to excessive volume!

- Bullet point/information on operating steps and results
- ▶ Tasks to be performed

1.2. Proper use

The device is intended for private use only and not for industrial or commercial use. Using the device under extreme environmental conditions may result in damage to the device.

1.3. Declaration about Conformity

The following remote equipment has been supplied with this Smartphone:

- Wireless LAN
- Bluetooth

The company declares herewith that these devices comply with the fundamental requirements and the other relevant terms of the 1999/5/EG Guideline.

This device fulfils the basic requirements and the relevant regulation of the Ecodesign Guideline 2009/125/EG.

Complete declarations of conformity are available under

www.medion.com/conformity.



1.4. Usage Limitations

It is essential to turn off the smartphone in the following situations:

- Before boarding an aircraft or before packing it in your luggage. The use of radio devices in aircraft can have dangerous effects on the flight controls and interrupt radio contact and is thus prohibited.
- In hospitals, clinics or other health centres and in any locations in the direct vicinity of medical devices.
- In all locations where there is a risk of explosion (e.g. petrol stations; in dust-filled environments, e.g. where there is metal dust).
- In locations where the use of radio-controlled devices is prohibited, e.g. on construction sites or locations where people are working with explosives.

- While driving a motor vehicle (if no hands-free car kit is available).

1.5. Making Calls while Driving

As making calls can reduce concentration levels (while driving a car or riding a bicycle), this can lead to accidents. The following instructions should be followed exactly.

It is an offence to hold a telephone in your hand (or between your head and your shoulder) to make a call while driving. It is also illegal to write SMS, e-mail or use other programs while driving. Failure to comply will result in fines and in your name being entered in the central traffic offenders register.

The use of hands-free sets is allowed.



CAUTION!

A wired headset is not a hands-free set and may not be used while driving.



Using headphones/earphones to listen to this device at high volumes for an extended period can damage your hearing.

Hands-free systems should only be installed by suitably qualified professionals. Incorrect installation or maintenance can have hazardous consequences and may also void your guarantees – also that of the car. Irradiation of the car's on-board electronics can cause serious defects and result in danger to life and limb for you and others.

Do not use voicemailbox while driving. Do not listen to your messages until you have parked the car and switched the motor off.

If you accept a call via the hands-free set while driving, keep the call as short as possible. Concentrate on your driving. Try to find a parking area before making a call.

Please comply with all national regulations if you use your mobile while driving abroad.

If you need to call often while driving, you should have a hands-free system installed in your car.

These systems have been specially developed for this purpose.

Ensure that neither your smartphone nor the hands-free system can interfere with the functionality of the safety equipment in your car.

For vehicles with airbags: Bear in mind that the activation of the airbag involves the release of a large amount of force. Therefore, never install permanent or temporary telephone equipment in the area above the airbag.

If the smartphone or accessories are incorrectly installed this can lead to serious injury when the airbag is activated.



CAUTION!

Ignoring this advice can lead to serious injuries and/or property damage. Non-compliance can lead to severe penalties!

1.6. Additional Costs for Internet and Roaming Usage

Considerable volume-based data costs may apply when using the mobile internet. To limit these costs, we recommend that you book an Internet flat rate.



NOTE!

When the phone is used for the first time, roaming is deactivated. Check your mobile plan before using the device and, if required, switch off mobile data services until you have activated a suitable mobile phone roaming plan.

2. Safety instructions

2.1. Disclaimer – Children and Persons with Reduced Abilities

- This device is not intended for use by people (including children) with reduced physical, sensory or mental abilities or for those without experience and/or knowledge, unless they are supervised by a person responsible for their safety or they have been instructed in its use.
- Young children should be supervised to ensure that they do not play with the device. Children should not be allowed to use this device without supervision.
- Keep the device and its accessories out of the reach of children.



DANGER!

Keep plastic packaging out of the reach of children. There is a risk of suffocation.

2.2. Operational Safety

Please read this section carefully and follow all instructions given. The instructions will help you to operate the smartphone reliably and increase its service life.

- Do not insert anything into the device through the slots and openings. This could result in an electrical short circuit, an electric shock or even ignite a fire which will damage the device.
- Avoid exposing the device to water droplets or spray and do not place vases or anything containing water on the device. Liquids penetrating the device may impair its electrical safety.

- Plug the mains adapter into AC 100–240V~, 50/60 Hz earthed sockets only. If you are not sure about the power supply at the installation location, please ask your power supplier.
- The socket must be close to the device and easy to access.
- Use only the supplied mains adapter and attached USB cable.
- For extra safety, we recommend using an overvoltage protection device to prevent the device from sustaining damage as a result of power surges or lightning strikes.
- If you want to disconnect the device from the mains, first pull the mains adapter out of the wall socket and then out of the socket on the device. The mains adapter or the product may be damaged if this process is carried out in the reverse order. Always take hold of the plug when disconnecting the

cable from the socket. Never pull on the cable.

- Position the cable so that it cannot be stepped on or tripped over.
- To avoid damaging the cable, do not place any objects on it.
- Do not expose plug-in connections to pressure, e.g. from lateral forces. This could cause internal and external damage to the device.
- Do not apply force when connecting cables and plugs and make sure that connectors are the right way round.
- In order to prevent short circuits and cable breaks, do not crush or bend cables.
- Maintain a distance of at least one metre from sources of high-frequency and magnetic interference (TV sets, loudspeakers, mobile phones,

DECT telephones, etc.) in order to avoid malfunctions and data loss.

- Do not connect any devices to the smartphone which do not meet the requirements set out in the EN60950 standard “Information Technology Equipment – Safety” or the EN60065 standard “Audio, video and similar electronic apparatus – Safety requirements”.

2.3. Cleaning and Care

You can increase the lifespan of your device with the following measures:

- Always unplug the device and disconnect all cables before cleaning.
- Do not use solvents, corrosive or aerosol detergents to clean the device.
- Use appropriate cleaners to wipe the display, e.g. glass cleaners or monitor cleaners (available from specialist retailers).

- Clean the screen with a soft, lint-free cloth.
- Do not place the screen in strong sunlight or near ultraviolet light.
- Make sure that no water droplets remain on the device. Water can cause permanent discolouration.
- Store the packaging material in a safe place; always use this to transport the device.



ATTENTION!

None of the parts inside the device require cleaning or maintenance.

2.4. Data Backup



NOTE!

Back up your data on external storage media after each update. We do not accept any liability for claims for compensation arising from loss of data or any damages incurred.

2.5. Information about the Display

- Do not place any objects on top of the device and do not exert pressure on the screen. This could break the screen.
- To avoid damaging the screen, do not touch it with sharp objects.
- If the screen breaks, there is a danger of injury. If this happens, pick up the shattered pieces wearing protective gloves and send them to your service centre for professional disposal. Finally, wash your hands with soap, as the pieces may have been contaminated with chemicals.
- Prolonged exposure to strong sunlight can lead to display errors if the display is not refreshed. These should disappear after refreshing the screen.

2.6. Notes on Lithium-Ion Batteries

This device contains a lithium-ion battery. Please note the following when using lithium-ion batteries:

- Charge the battery regularly and as fully as possible. Do not leave the battery discharged for long periods
- Keep the battery away from heat sources such as radiators or open flames, e.g. candles. There is a risk of explosion!
- If the device cannot be switched on even though it is connected to a power source, please contact your service centre.
- Do not use chargers or batteries that are damaged in any way.
- Use the battery only for its intended purpose in this smartphone.

- Do not dismantle or deform the batteries. You could injure your hands or fingers or battery fluid could come into contact with your eyes or skin. If this happens, rinse the affected areas immediately with plenty of clean water and contact your doctor immediately.
- Keep batteries away from children. If batteries are mistakenly swallowed, consult your doctor immediately.
- Risk of explosion if battery is replaced by an incorrect type.
- Before inserting the batteries, check that the contacts in the device and on the batteries are clean and, if necessary, clean them.
- Always observe the correct polarity. Make sure that the plus (+) and minus (–) poles are correctly inserted to avoid short

circuits.



DANGER!

There is a risk of explosion, if rechargeable batteries are replaced incorrectly.

- Do not leave the battery in hot or cold locations, e.g. in a car in summer or winter. Extremes of temperature can adversely affect the battery's capability to charge correctly.
- Do not attempt to short circuit the battery. A short circuit across the contacts can damage the battery or the object connected to it.
- If you are not going to use your smartphone for a long time, please remove the battery.
- Dispose of used batteries according to the instructions.

2.7. Environmental Requirements

- Keep your smartphone dry.
- Do not expose it to extremes of temperature (hot or cold).
- Do not place your phone next to burning cigarettes, open flames or other heat sources.
- Do not drop or bang the smartphone and do not shake it. Rough handling can damage the internal circuitry.
- Do not paint your smartphone as the paint could block the microphone, the ear piece or hinder moving parts and thus prevent normal use.
- Treat your smartphone carefully and store it in a clean and dust-free location.
- Under no circumstances attempt to open the smartphone or battery. Any modification to the device is prohibited and will

invalidate the guarantee.

- The ring tone is played back via the ear piece. To avoid damage to hearing, accept the call before putting the smartphone to your ear.
- Use the supplied stereo headset only with this smartphone to avoid risks.

2.7.1. Faults

- If the mains power adapter, connection cable or device is damaged, immediately remove the plug from the power supply.
- Never try to open and/or repair the device or the mains adapter yourself. In the event of a fault, contact our Service Centre or another suitable professional repair workshop.

2.7.2. People with Pacemakers

- When using your smartphone, be sure to maintain a safety distance of at least 15 cm from your implanted pacemaker to avoid any possibility of interference.
- Do not carry the smartphone in a breast pocket when it is switched on. Hold the smartphone to the ear on the opposite side to your pacemaker to avoid any possible adverse effects.
- Switch off the smartphone immediately if you suspect any adverse effects.

2.7.3. People with Hearing Aids

- If you use a hearing aid, ask your doctor or the manufacturer of the hearing aid about any possible adverse effects caused by radio waves.

2.8. Emergency Calls

This smartphone uses radio signals, wireless and land-based networks, as well as functions programmed by the user. Because of this, a connection cannot be guaranteed under all possible circumstances.

Therefore, you should not rely exclusively on the smartphone for essential communication (e.g. in medical emergency situations).

Emergency calls may not be possible on some mobile networks or while certain network services and/or smartphone functions are being used. Contact your local network operator.

2.9. Saving a Number for use in Emergencies.

If you are involved in an accident or injured and have your smartphone with you, it is important for the emergency services to be able to inform a close friend or family member. Often, it is not immediately apparent to rescue workers which contact in the phone directory should be called.

Therefore an international abbreviation has been developed to allow emergency services to quickly inform one or more people of an event.

Save a contact under the name ICE (“in case of emergency”) for this purpose. If more than one person is to be notified, you can use ICE1, ICE2, and so on.

3. Package Contents


Please check your purchase to ensure all items are included and contact us within 14 days of purchase if the delivery is incomplete:

The following items are supplied with your product:

1 x MD 98388/E4002 Smartphone 4"

1 x Lithium-Ion Battery 1500 mAh

1 x AC Adapter

AC/DC Adapter	
Manufacturer	Ktec, China
Model	KSAS3R50500068VAU
Required mains voltage	100–240 V (50-60 Hz)
AC input	100–240 V~ 0.15 A, 50–60 Hz
DC output	5 V  0.68 A max.

1 x USB Charging Cable / Data Cable

 
1 x Earphones

1 x Instruction Manual

1 x Warranty Certificate

3.1. Overview of the Device

3.1.1. Top



Ref.	Description
1	Headset jack
2	Charger/USB jack
3	Power key <ul style="list-style-type: none">• Hold to select phone modes or to power off.• Press to switch your phone to standby mode.• Press to wake up your phone.



PLEASE NOTE!

 
Please only use stereo earphones/headphones with this smartphone. The use of a headset (earphones + microphone) may affect the playback of media files.






WARNING!


The use of headphones/earphones with a high volume can lead to lasting damage to your hearing. Set the volume to the lowest level before reproducing any sound. Start the sound reproduction and increase the volume to the level that is comfortable for you. Changing the basic settings of the equaliser can also cause damage to the hearing of the listener. It can cause damage to the hearing ability of the listener if a device is operated through earphones with an increased volume for a long period.

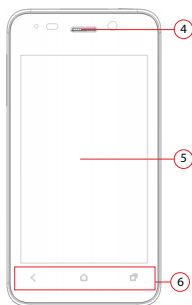3.1.2. Front Side




Ref.	Description
4	Earpiece
5	Touch screen
6	 Menu Key <ul style="list-style-type: none">• Touch to get the options for the current screen.  Home Key <ul style="list-style-type: none">• Touch to return to the home screen from any application or screen.• Hold to see recently used applications.  Back Key <ul style="list-style-type: none">• Touch to go to the previous screen.

 3.1.3. Right-Hand Side



Ref.	Description
7	Volume Up/Down <ul style="list-style-type: none">• Press or hold either end of the button to turn the volume up or down

 3.1.4. Rear Side

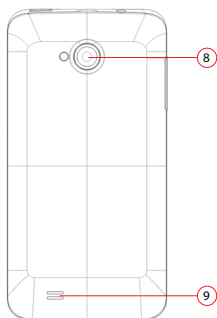

Ref.	Description
8	Camera with LED flash
9	Speaker

4. Preparations for using the Smartphone

You must insert at least one SIM card and charge the battery before you can use the smartphone.

4.1.1. SIM Card

Purchasing a SIM card involves choosing a network provider, telephone network and plan.

Therefore, check out which plan from which network provider is best suited to your telephone usage before purchasing the SIM card.

You will also receive your telephone number with the SIM card. SIM cards can also feature additional memory functions (e.g. for the phone book or SMS messages)

- Store all SIM cards out of the reach of small children.
- Handle your SIM card carefully because the card and its contact points can be easily damaged through scratching or bending.

 
4.1.2. Installing the SIM Card



CAUTION!

Always ensure that the smartphone is switched off when carrying out this process to avoid any damage to the device or the card.

- ▶ Remove the back cover.
- ▶ Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

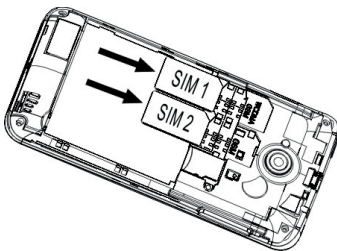

- The WCDMA (SIM1) card slot supports high-speed data transmission via the "3G" mobile network. Insert here, for example, a SIM card with an Internet flat rate from your network provider.

- The GSM (SIM2) card slot supports GSM. Insert here, for example, a SIM card with a call flat rate from your network provider.
- If you are only using one SIM card, insert it into the WCDMA (SIM1) card slot to enjoy all of the benefits offered by the smartphone.

 
4.1.3. Installing the SD Card



CAUTION!


Always ensure that the smartphone is switched off when carrying out this process to avoid any damage to the device or the card.

- ▶ Insert the memory card into the metal slot with the metal contacts facing down.

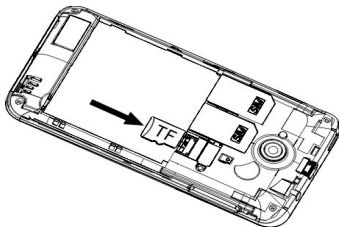

4.1.4. Installing the Battery

 - ▶ Remove the back cover.
- ▶ Before installing the battery, first insert the SIM card and, if desired, a microSD card as described in the previous sections.

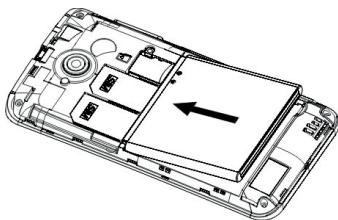

- ▶ Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.
- ▶ Press the cover gently back into place until you hear a click.

4.1.5. Charging the Battery






PLEASE NOTE!

You can charge your smartphone with SIM card inserted or without SIM card inserted.

- ▶ Before you charge the battery, make sure that the battery cover has been securely replaced.
- ▶ Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.
- ▶ Connect the charger to a standard AC wall outlet.

5. Operation

5.1.1. Switching on the Smartphone

- ▶ Hold down the Power Key to switch on your smartphone. The smartphone will switch on and the quick selection screen will be displayed.
- ▶ Drag the lock symbol  to the  position to unlock the smartphone, or to the  symbol to start the camera function.
- ▶ Enter the four- to eight-digit PIN code for the SIM card inserted in card slot SIM1 and confirm with **OK**. If you have entered a wrong digit, tap on **Cancel**.
- ▶ If you have entered a second SIM card in the device, now enter the four- to eight-digit PIN code for the SIM card inserted in card slot SIM2 and confirm with **OK**. If you have entered a wrong digit, tap on **Cancel**.

5.1.2. Touch Control

You can use finger gestures to control your phone. The controls on your touch screen change dynamically depending on the tasks you're performing. Do not use any pointed or sharp-edged objects.

- ▶ Tap the buttons, icons, or applications to select items or to open applications.
- ▶ If you hold down your finger on an input field, all of the available options will be displayed.
- ▶ Flick the screen to scroll up, down, left or right.
- ▶ Point, drag and drop to move particular items across the screen.
- ▶ Double-tap the screen to zoom in to or out from an image.

5.1.3. After Switching on the Smartphone

Your smartphone provides you with access to a variety of applications from Google™. You need a Google™ account to use these applications. This account allows you to use a large number of different services, e.g. Google Mail™.

5.1.4. Initial Setup

When you first power on your phone after purchase or reset it to factory settings, you need to configure some settings before using it:

- ▶ If required, change the language by tapping on the relevant language option.
- ▶ Tap on **Start** on the start screen and follow the instructions shown on the screen.
- ▶ Set the time and date and then tap on **Next**.
- ▶ You can now create a Google™ account (tap on **Get an account**). If you already have a Google™ account, you simply need to sign in (tap on **Sign in**). If you do not want to create a Google™ account or sign at this time then tap on **Not now**.



PLEASE NOTE!






You can view the display in portrait or landscape format. Simply hold the smartphone upright or on its side to change the orientation of the display.

An Internet connection is required in order to create a Google™ account or to sign in. You can connect to the Internet either via your SIM card or a Wi-Fi connection. Please bear in mind that costs may be incurred for the Internet connection if you are connecting via your mobile network operator and you do not have a flat rate contract.

- ▶ Enter the Google™ location options and tap on **Next**.

5.1.5. Switching your Smartphone off

- ▶ To switch it off, hold **Power Key** to call up the phone options.
- ▶ Select Power off, and then tap **OK**

	Airplane mode (switches the smartphone to airplane mode)
	Power off (switches the smartphone off completely).
	Silent mode (switches the smartphone to silent mode)
	Meeting mode (switches the smartphone to vibration mode)
	Activate sounds (activates all acoustic signals on the smartphone)

5.1.6. Switching to Standby Mode


In standby mode, your device will be placed into a low-energy standby mode with the display turned off in order to save battery power. If there is no operation within a preset time, the screen backlight will automatically turn off, and the device will be locked.

You can adjust the preset time under **Settings** ⇒ **Device** ⇒ **Display** ⇒ **Standby**.

- ▶ Press the ON/OFF button to switch to standby mode.

5.1. Waking up from Standby Mode

This is the default setting and can be changed in the menu.

- ▶ While the screen display is off, press the power button quickly to re-illuminate the screen.
- ▶ Drag the  symbol in any direction until the quick access screen appears.

5.2. Main Screen

You decide what is displayed on your start screen. Set your own background, add shortcuts for the widgets or apps you require or remove them if desired.



 





























(image similar)







1	Status and notifications
2	Google input window
3	Installed apps
4	Telephone function
5	Contact list
6	Main menu
7	SMS/MMS menu
8	Web browser
9	Quick settings
10	Voice dialling
11	Network/battery/date display

5.3. Managing Notifications


The status bar at the top of the home screen provides notification alerts with different icons on the left side. Below are some of the icons and their meanings:

	GPRS in use		Signal searching SIM1/SIM2
	EDGE in use		Signal strength SIM1/SIM2
	3G in use		Data connection active
	USB connected		GPS on
	Battery very weak		Call is being recorded
	Battery almost empty		Alarm has been set
	Battery is weak		Wi-Fi network
	Battery fully charged		Bluetooth icon

	Battery charge		Loudspeaker on
	Synchronisation		Problem with the delivery of an SMS/MMS
	Meeting mode		New Google Talk instant message
	Airplane mode SIM1/SIM2		Upcoming event
	Silent mode		All acoustic signals have been activated
	New SMS		Song is playing/Playback via the connected headphones
	New Gmail message		Downloading data

	Missed call		New Wi-Fi network detected
	Call in progress		USB debugging connected
	Call on hold		Portable Wi-Fi hotspot or Wi-Fi direct is on

 5.3.1. Using the Notification Field

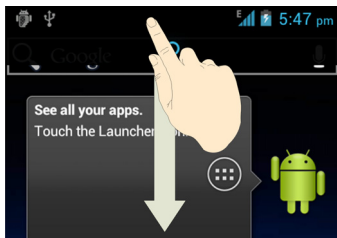

Swipe your finger from the top downwards over the status bar to open the notification field that displays your calendar events, new messages and current settings such as call forwarding or call status. In addition, you can open messages, reminders, etc. from here.

5.4. Making/Checking Settings

- ▶ In order to change or display your telephone settings, press the Menu key and tap on **Settings**.

	Menu	Description
Wireless & Network	SIM management	Define the SIM card to be used here for SMS, voice mail, video calls and data connections. Settings for international calls, roaming and contacts.
	Wi-Fi	Configure and administer your wireless connections (Wi-Fi).

	Menu	Description
	Bluetooth	Displays the data volume of the installed applications. Authorise mobile data connections and virtual private networks.
	Data usage	Configure the data usage settings for the SIM card, e.g. the limit for mobile data usage and the data usage cycle.
	More...	Settings for airplane mode, VPN, tethering & mobile hotspot, Wi-Fi direct and the mobile network.

	Menu	Description
Device		
	Audio profiles	Configure the sound settings, e.g. ring tones and notifications.
	Display	Configure the display settings, e.g. brightness.
	Storage	Check the available memory on an inserted microSD card and the internal device memory.
	Battery	Displays the charge status and the remaining battery life.
	Apps	Manage your applications and install new applications.


	Menu	Description
Personal		
	Location services	Here you can set the sources that are to be used to determine your location.
	Security	Create your unlock pattern, define the memory management for the registration information on your mobile device.

	Menu	Description
	Language & input	Set the operating system language and region as well as the text input option. Set the voice recognition and text-to-speech options.
	Backup & reset	Configure the data protection settings, e.g. backup, restoration and personal data.
Accounts		
	Add account	Manage your accounts and configure the synchronisation settings.

	Menu	Description
System		
	Date & time	Set the date, time, time zone and date/time format.
	Scheduled power on & off	Here you can set planned switch-on and switch-off times for the smartphone.
	Accessibility	After installing the applications for input support, you can set various options here.
	Developer options	Selection of developer options, e.g. USB debugging.

	Menu	Description
	About the Smartphone	Display the mobile network status, battery level and legal information. You can also search for system updates.

 
5.4.1. Favourites List

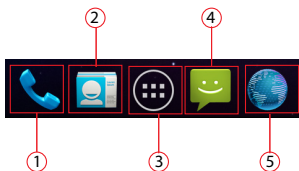



1	Start call
2	Contacts Access to all contacts on your smartphone
3	Open main menu
4	SMS/MMS messages
5	Open Internet browser

5.5. Making the First Call

You can make calls using the SIM card you defined previously.

- ▶ Tap on **Settings** ⇨ **SIM management** ⇨ **Voice call**.
- ▶ Select the SIM card here that you want to use to make calls.
- ▶ Touch the Home key and then  at the bottom.



- ▶ Enter the phone number.
- ▶ Tap on , to start the dialling process via SIM card SIM1.
- ▶ Tap on , to start the dialling process via SIM card SIM2.

The phone number you entered will now be called from the SIM card you have just selected.

It is also possible to initiate a call from the contact list, call list or a text message.

5.5.1. Answering a Call

- ▶ Drag the telephone receiver symbol onto the green telephone receiver symbol.

5.5.2. Rejecting a Call

- ▶ Drag the telephone receiver symbol onto the red telephone receiver symbol.

5.5.3. Rejecting Calls with an SMS

- ▶ Drag the telephone receiver symbol onto the SMS/MMS symbol and select the appropriate template.

The SMS will be sent using the SIM card previously defined for SMS/MMS messages

5.5.4. Contacts

You can save contacts in your smartphone memory or your SIM card. More information about a contact can be saved on the smartphone memory than on the SIM card. For example, addresses, photos, nicknames, websites and much more

- ▶ You can call your contacts by tapping on (**Contacts**).



The contacts screen contains the following tabs: **Contacts**, **Favourites** and **Groups**.

5.5.5. SMS/MMS

Under **SMS/MMS**, you have access to short messages (SMS) or multimedia messages (MMS).

You can send SMS or MMS messages using the SIM card you defined previously.

- ▶ Tap on **Settings** ⇨ **SIM management** ⇨ **Messaging**.
- ▶ Select the SIM card here that you want to use to send SMS/MMS messages.




If you answer an SMS/MMS then this answer will be automatically sent from the SIM card that also received the SMS/MMS message.

If you receive a new message, you can open it via the notification field or the message screen. Simply tap on the new message to read it.

5.5.6. Writing a new Message


- ▶ Tap on (SMS/MMS).



- ▶ Tap on the symbol for a **New Message** . Enter the number or name of the recipient. Corresponding contacts will be suggested during input. Tap on a suggested contact to add it as a recipient.
- ▶ Tap on **Type message** and then enter your message.
- ▶ Tap on  to send your text message from SIM card SIM1.
- ▶ Tap on  to send your text message from SIM card SIM2.
- ▶ If you want to add an attachment to a text message, tap on the paperclip symbol and select the relevant attachment. The SMS will then be automatically converted into an MMS message.

5.5.7. Google Mail™

Google Mail™ is a web-based e-mail service that is configured when you create your Google™ account. Depending on the synchronisation settings, Google Mail™ on your smartphone will be automatically synchronised with your Google Mail™ account on the Internet.

- ▶ Tap on the Menu key on the main screen.
- ▶ Tap on **Google Mail**.
- ▶ Tap on write e-mail .
- ▶ Enter the e-mail address for the recipient in the **To** field. If you want to send the e-mail to multiple recipients, separate each e-mail address using a comma. You can enter multiple recipients.
- ▶ Enter the subject and text.
- ▶ Press the Menu key and tap on **Send**.

5.6. Connecting to the Internet

You can use the standard connection settings to access the Internet via your mobile phone network or use your Wi-Fi connection.

In order to access the Internet via the mobile data network, an appropriate service must be active in your contract.



PLEASE NOTE!

Read the chapter "Internet" through carefully to avoid unnecessarily high phone bills.

Also contact your mobile network operator if the settings for accessing the mobile data network provided by your service provider are not preconfigured on your smartphone. If you change the settings without consulting your mobile network operator then your smartphone may not function correctly.

5.6.1. Adding a new Data Network Connection

Your smartphone is preconfigured for accessing the Internet via the ALDI mobile service.

If it is necessary for you to add a new data network connection, ask your mobile network operator for the following information:

- Name of the access point (APN)
- If necessary, the user name and password.
- Server IP and port number, if the network uses a proxy server.
- ▶ Tap on the Menu key on the main screen.
- ▶ Tap on **Settings** ⇨ **More...** ⇨ **Mobil networks** ⇨ **Access Point Names**.
- ▶ Press the Menu key and tap on **New APN**.
- ▶ Tap on **Name** to enter the name of your access point (freely selectable).

- ▶ Tap on **APN** to enter the APN that you want to add.
- ▶ Tap on **Proxy** and **Port** to enter the server IP and port if the network uses a proxy server.
- ▶ Tap on **Username** and **Password** and enter the required information in each case. (If there are no user names and passwords, leave these fields blank.)
- ▶ If required, tap on **APN type**.
- ▶ Press the Menu key and tap on **Save** to conclude the process.



PLEASE NOTE!

*In order to set the APN to the default settings, press the Menu key and tap on **Reset to default**.*

5.6.2. Additional costs for Internet and Roaming Usage

Considerable volume-based data costs may apply when using the mobile Internet. To limit these costs, we recommend that you book an Internet flat rate.

Find out about the various options available from your mobile network operator. Also ask about the rates for using your smartphone abroad (roaming) because this can also result in high charges.



NOTE!

When you use the smartphone for the first time, data roaming (use of data services in a different data network than your own home network provided by your mobile network operator e.g. abroad) is deactivated!

Check your mobile plan before using the device and, if required, switch off mobile data services until you have activated a suitable Internet flat rate. This is done as follows:

5.6.3. Internet

Volume-based data costs may apply when using the mobile Internet. Check your mobile plan before using the device and, if required, switch off mobile data services until you have activated a suitable Internet flat rate. This is done as follows:

Tap on **Menu**.

- ▶ Tap on the following in sequence
Settings ⇨ **More...**
- ▶ Now tap on **Mobile networks**.
- ▶ Now tap on **3G service**.
- ▶ Now tap on **Enable 3G**.
- ▶ Tap on **Off** to deactivate data services via 3G.
- ▶ Tap on **Continue** to confirm your selection.

This will prevent data from being transmitted over the mobile network. Later, when you want to reactivate data services, simply recheck the box.

5.6.4. Roaming

Some Internet flat rates only provide for a limited volume of data traffic, if at all, when abroad.

To avoid excessive costs for Internet use abroad, please do the following:

- ▶ Tap on **Menu**
- ▶ Tap on the following in sequence
Settings ⇒ **SIM management**
- ▶ Now tap on **Roaming**.
- ▶ Now tap on **Data roaming**.
- ▶ Tap to deactivate the check box next to **Data Roaming**.

This will prevent data from being transmitted over the mobile network while you are abroad. Later, when you want to reactivate data services, simply recheck the box.

5.6.5. Limiting Data Usage

The smartphone has an automatic function for limiting mobile data usage. If the value you have set is exceeded then the data connection is deactivated,

- ▶ Tap on **Settings** ⇒ **Data usage**.
- ▶ Now select the SIM card for which you want to activate the data usage limit function.
- ▶ Now tap on **Mobile Data ON**.
The data usage limit function is now active for the selected SIM card.
- ▶ Tap on **Data usage cycle** ⇒ **Change cycle** to set the time period for monitoring data usage.



NOTE!

The time period for displaying the monthly data usage can be defined under the option Data usage cycle.

- ▶ Select the date for resetting the data usage cycle.
- ▶ Tap on **Set** to save the date.

5.6.6. Changing the Data Volume

As current smartphone contracts offer Internet flat rates with different data usage limits, it is advisable to define the data usage limit of your smartphone contract in the data usage limit function on your smartphone.

For example, if your monthly Internet flat rate has a max. limit of 1 GB, set the red line (limit) to 1 GB. Set the yellow line (warning) to a lower value.

- ▶ Now select the SIM card for which you want to set the data usage limit function.
- ▶ Tap on the table and drag the red line (limit) to 1 GB.
- ▶ Now drag the yellow line (warning) to a lower value.
- ▶ Tap on the **Back** button to save your entry.

5.6.7. Activating Wi-Fi

Wi-Fi provides you with access to the Internet over a distance of several metres.

- ▶ Tap on the Menu key on the main screen.
- ▶ Tap on **Settings** ⇒ **Wi-Fi**.
- ▶ Activate the **Wi-Fi** checkbox to switch on this function.
- ▶ Tap on **Scan**.
The name of all of the Wi-Fi networks available for your smartphone and their security settings (open or secure) will now be displayed.
- ▶ Tap on a network that you want to connect to.
- ▶ Tap on Scan to update the list of available networks in your immediate vicinity.



PLEASE NOTE!

If you attempt to make a connection to a secure network, you will be required to enter a password to gain access.

6. Recycling and disposal



Device

At the end of its life, the device should not be disposed of in household rubbish. Enquire about the options for environmentally friendly and appropriate disposal.



Batteries

Do not dispose of used or defective batteries in the household rubbish! They should be taken to a collection point for used batteries.



Packaging

Your device has been packaged to protect it against transportation damage. Packaging is raw material and can be re-used or added to the recycling system.

7. Technical data

Dimensions	approx. 64 x 126 x 12 mm
Weight	approx. 137 g
Band	GSM 850/900/1800/ 1900 MHz
UMTS	850/2100 MHz
WLAN	IEEE 802.11 b/g/n (2.4 GHz)
Bluetooth	V4.0
Display	10.16 cm/4" Touchscreen
Resolution	480 x 800
Camera	5 MP (max. 2560x1920) CMOS sensor Autofocus Flash
Front Camera	0.3 MP
Memory	microSD slot, max. 32 GB
USB interface	USB 2.0, micro USB
Mains adapter	KSAS3R50500068VAU (Ktec)
Battery	S1280 (Li-Ion, 1500 mAh)
Temperatures	
In operation	+5°C to +35°C
Storage	0°C to +60°C
Relative humidity	10–90 % (non- condensing)



N26968

After Sales Support

Phone: 1300 884 987
Internet: www.medion.com.au

4" Smartphone

E4002 (MD 98388)

Repair and refurbished goods or parts notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair. Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick), some or all of your stored data may be lost during the repair process. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process. Please be assured though, refurbished parts

or replacements are only used where they meet ALDI's stringent quality specifications. If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 884 987 or write to us at:
MEDION Australia Pty Ltd
St. Leonards, NSW 2065
Australia

MEDION Help Desk 1300 884 987
(Operating Hours: Mon–Fri 8:30AM to 6:00PM EST)
E-mail: australia@medion.com

MEDION®

MEDION Australia Pty Ltd
St Leonards, NSW 2065
Australia

Hotline: 1300 884 987
Opening hours: Mon - Fri 08:30AM to 06:00PM EST

Internet
www.medion.com.au

E-mail Support
australia@medion.com